


## Smart3D Slicer installation:

**Note: before starting, uninstall and delete any older version of the Smart3D Slicer.**


First proceed with the download of the software from the link:

[www.smart3d.tech/software\\_releases/Smart3Dslicer.rar](http://www.smart3d.tech/software_releases/Smart3Dslicer.rar)

1. Once the download is done, extract file in C disc.  
Place the zip file in C disc, right click, and select **Extract here**.

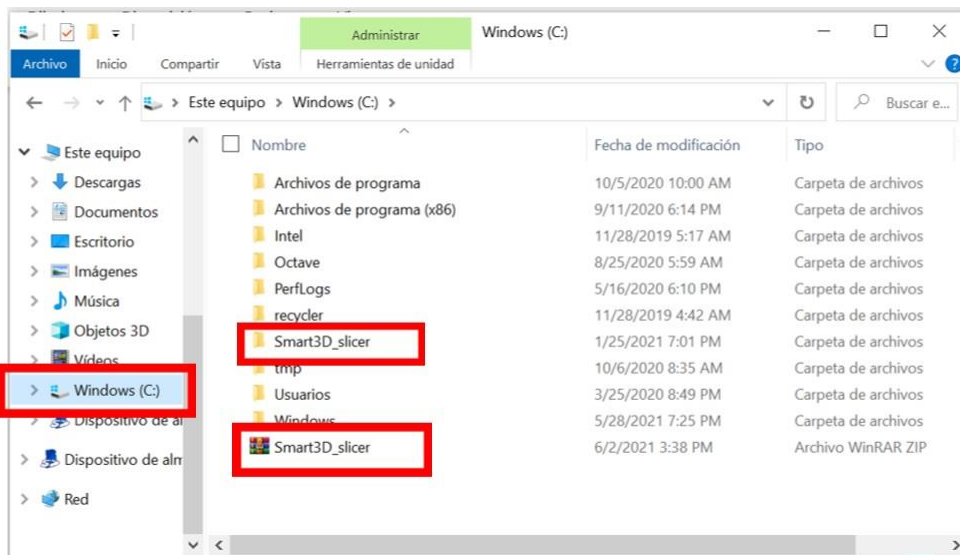

 
2. Open the file and click on **Smart3dslicer\_V2.0**, to start the Slicer.



You will see the following image on your screen;



Once the installation procedure has finish, the Smart3D Slicer will open;

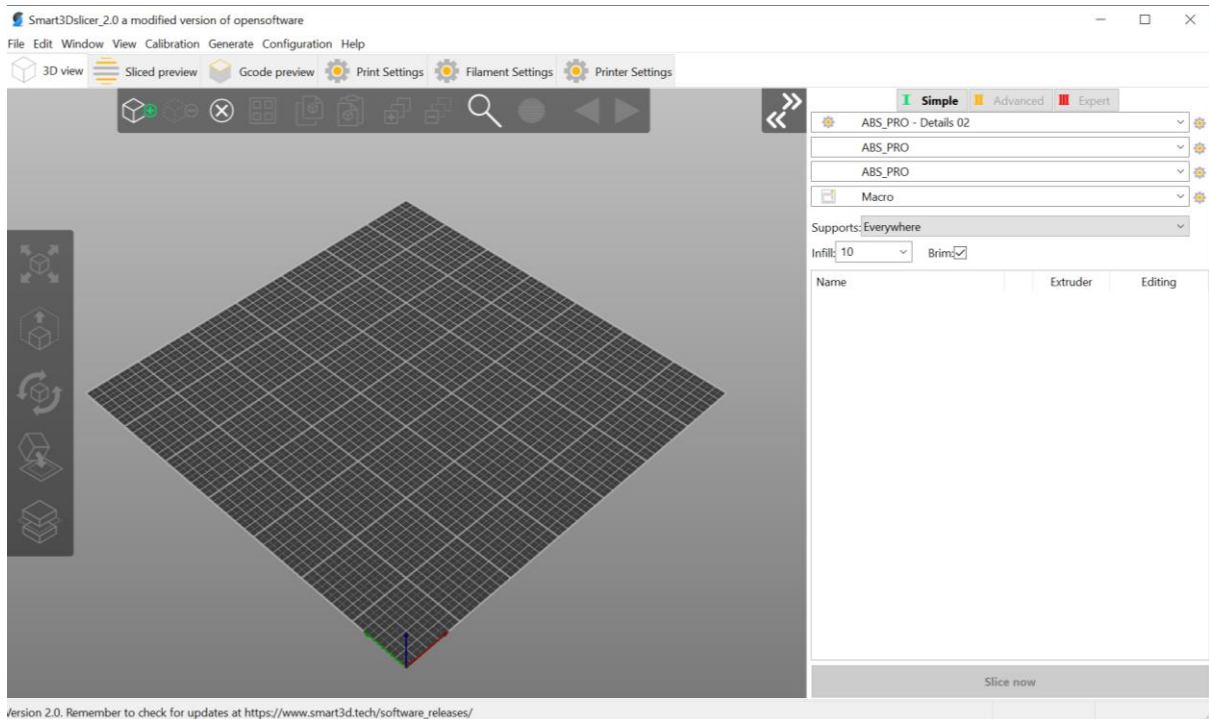

3. Now you can choose the .stl you want to print


## How to import new profiles

To import the last version of a profile to the slicer, follow this procedure:

a. Open the following link, and download the last Config Buldle.

[https://www.smart3d.tech/software\\_releases/ConfigBundle](https://www.smart3d.tech/software_releases/ConfigBundle)

b. Go to File > Import > Import Config Bundle.

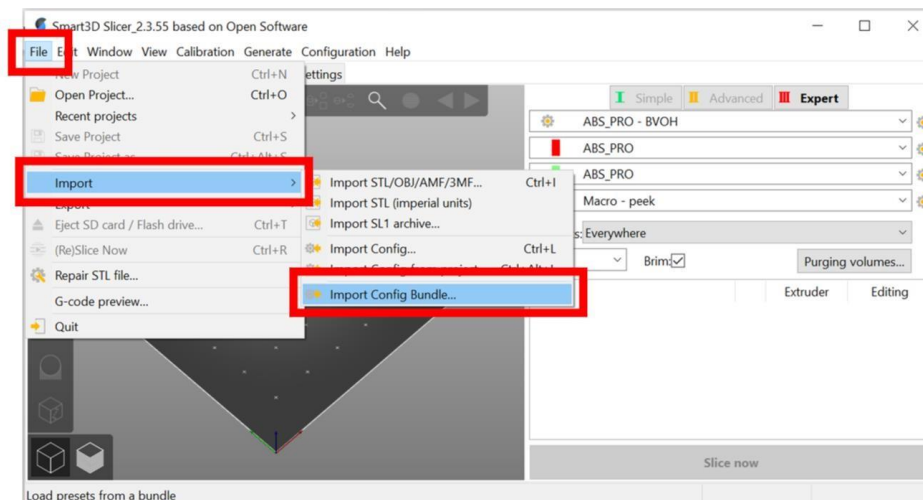

c. Select the Config Bundle file you have just download from our page.